

Quick Start Guide — Yealink T74W



This IP phone **configures itself automatically**: no SIP settings need to be entered locally on the device.

1. Check your number in the Kiosk

1.1 Before plugging in the phone, check in the **Kiosk** (*My services > Telephony > Manage my IP telephony*) that the phone (MAC address printed on the back of the device) is linked to your SIP account.

1.2 Without this link, the phone cannot configure itself automatically.

2. Install the phone

2.1 Attach the stand (2 adjustable angles) and connect the handset with its cord to the handset socket.

2.2 Connect the Ethernet PoE cable (802.3af, class 2) to the phone's **Internet** port — power adapter 5 V/2 A not included (optional). The second Ethernet port (**PC**) lets you connect a computer.

2.3 Wait a few minutes (up to **10 minutes**): the phone retrieves its configuration and updates its firmware automatically. Do not unplug it during this time.

2.4 Ready: your number or name appears on the screen and you hear the dial tone.

i Using the built-in Wi-Fi is not recommended: technical support is not provided for a phone connected over Wi-Fi. Prefer the Ethernet cable.

3. Use your phone

3.1 4.3" color screen (480 x 272), **10 line keys** with LEDs (up to **50** programmable keys over 5 pages), up to 16 SIP accounts.

3.2 Programmable keys (BLF, etc.) and ringtones: can be configured from the **Kiosk** (*Manage my IP telephony > Manage*).

3.3 Headset: built-in Bluetooth 5.0, RJ9 port, 1 USB 2.0 port.

3.4 Optional: EXP55 expansion module (up to 3), EHS40 wireless headset adapter, wall mount.

Need help?

A.1 Phone web interface: from the Kiosk (*Manage my IP telephony > Manage > "PHONE WEB INTERFACE" tab*) — the credentials are managed by Celeste.

A.2 Phone does not configure itself: check that the phone is linked to your account in the Kiosk (step 1.1), then restart it by unplugging it for a few seconds.

A.3 Manufacturer datasheet and documents:

<https://support.yealink.com/docs/sip-t74w/yealink-sip-t74w-datasheet/7cd8bba573d24cf69bd16f7c7adddbc4f>

A.4 Celeste support: <https://www.celeste.fr> and <https://www.celeste.ch>



Scan to find the latest version of this guide online (PDF)